

Simplex[®] Lock Quick Reference

Models: PS1210HD, PS1210EZ and HAS410

Read Contents Carefully For Trouble-Free Operation of Your Safe

Dear Valued Customer:

Congratulations on your purchase of the finest safe from American Security Products, Co.

You've taken an important step in organizing and protecting your most valued possessions. Every AMSEC safe is professionally hand-crafted and designed to provide a lifetime of trouble-free performance.

 
AMSEC offers the industry's finest warranty backed by a nationwide network of highly skilled authorized dealers, providing prompt, courteous, and professional service. We suggest that you read the Limited Warranty thoroughly, and invite you to contact your authorized AMSEC dealer or AMSEC's Service Department if you have any questions.

Please also take the time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

Again, Congratulations and Thank You for selecting AMSEC!



AMERICAN SECURITY PRODUCTS CO. 11925 Pacific Ave., Fontana, CA 92337 951-685-9680 www.amsecusa.com



Your Simplex Lock is presently set with a combination of: First push #2 and #4 together, and then #3. Make a habit of turning the knob **LEFT** (counter-clockwise) before pushing the combination. Should anyone have attempted an improper combination, this action clears off such an attempt and reactivates the buttons.

TO OPEN:

- I) Turn knob LEFT (counter-clockwise) to active all buttons.
- 2) Push proper buttons in present order for the combination.
- 3) Turn knob **RIGHT** (clockwise) to open.

TO LOCK:

Turn knob **LEFT** (counter-clockwise) until it stops.


TO CHANGE YOUR COMBINATION:

You may easily change to a new combination, using one, all five, or any number of buttons you wish in any order. Two or more buttons may be pushed at one time as part of your new combination. Simple two and three button combinations are easy to remember and still provide top security. Note: a particular button can be pushed only once in establishing a new combination. **RECORD YOUR NEW COMBINATION WHERE INDICATED IN THIS DOCUMENT AND KEEP IN A SAFE PLACE.**

- 1) Open the door or drawer and *relock your lock.*
- Press the correct buttons in the proper order for your EXISTING combination.
- 3) On the inside of the safe, pull back the protective foam as shown in the photo to the right. There is a combination change button located on the inside of the door. Push until you hear a click.



- **NOTE:** For HAS410 series safes, there is a combination change button located on the inside of the door as shown.
- Turn the knob LEFT (counterclockwise) to 'clear-out' the existing combination.
- 5) Press the buttons firmly and deliberately in the desired sequence for your new combination.
- Turn the knob to the **RIGHT** (clockwise) to set your new combination into the mechanism.

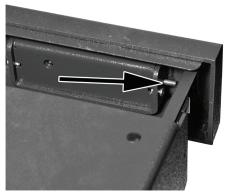

HAS410 Combo Change Button

Turn the knob full **LEFT** to lock the lock. Your new combination is now installed.

NOTE: Ensure combination is tested several times with the lid open to confirm combination is properly set.

Record New Combinations Here:



Limited Product Warranty

LIMITED WARRANTY—SECURITY SAFES & ELECTRONIC PRODUCTS

Product Category

Duration of Warranty

(Beginning from date of first consumer purchase / Proof of purchase necessary)

PS1210HD, PS1210EZ, HAS410 and related components 1 Year Parts & Labor

What is covered and what is not covered:

This warranty covers all defects in materials or workmanship in this product, but DOES NOT COVER:

- (1) Damage, deterioration or malfunction resulting from:
 - a. Accident, negligence, misuse, abuse, improper installation, failure to perform normal maintenance or operation to follow instructions labeled on or provided in the safe.
 - b. Any damage occurred from shipment. (Claims must be presented to the carrier)
 - c. Repair or attempted repair by anyone other than a pre-authorized AMSEC service dealer.
- (2) Any unit which has been altered or on which the serial number has been defaced, modified or removed.
- (3) Normal wear, battery replacement, any periodic maintenance or where combination lock has been changed without factory authorization.

Who may enforce the warranty:

This warranty is only enforceable by the original purchaser.

What we will pay for and what you must pay for:

AMSEC will repair or replace units covered by this warranty, without charge to the consumer for labor and materials. YOU ARE RESPONSIBLE FOR ANY INSTALLATION OR REMOVAL CHARGES AND FOR ANY SHIPPING CHARGES. State sales tax does not apply to warranty service work and will not be honored. If safe components must be shipped for warranty service, AMSEC will pay the shipping charges to any destination within the USA if the repairs are covered by the warranty. Defective parts must be returned (not repaired unless instructed) to AMSEC. If parts are not returned, the warranty invoice will be denied.

How you can get warranty service:

- If your AMSEC safe requires service, contact your local authorized AMSEC dealer and the dealer will advise you of the procedures to be followed. If this is not practical, contact the AMSEC Service Department at the address on front cover or call 951-685-9680, ex. #1036.
- (2) All warranty service must have prior authorization, accompanied by proof of purchase as evidence of warranty coverage. A warranty authorization number must be obtained from AMSEC before any service work is performed. The serial number, description of product and description of problem must be supplied to AMSEC to determine warranty status before an authorization number will be assigned. Issuance of the authorization number recognizes only the existence of the problem and does not constitute an admission of liability by AMSEC. Only approved service representatives will be authorized to perform warranty service. Any service performed prior to issuance of a warranty authorization number will be subject to denial.

Limitation of Implied Warranties:

Any implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty.

Exclusions of Damages:

AMSEC's liability for any defective products is limited to repair or replacement of the product, at our option.

AMSEC shall not be liable for damages based upon inconvenience, loss of use, damage or loss of contents, or any other damages whether incidental, consequential or otherwise.